


Change LWRP to NGVD

To change the Hydro LWRP to NGVD go to Modeler, pick Input file, give it your output file, and set up the Function as such.

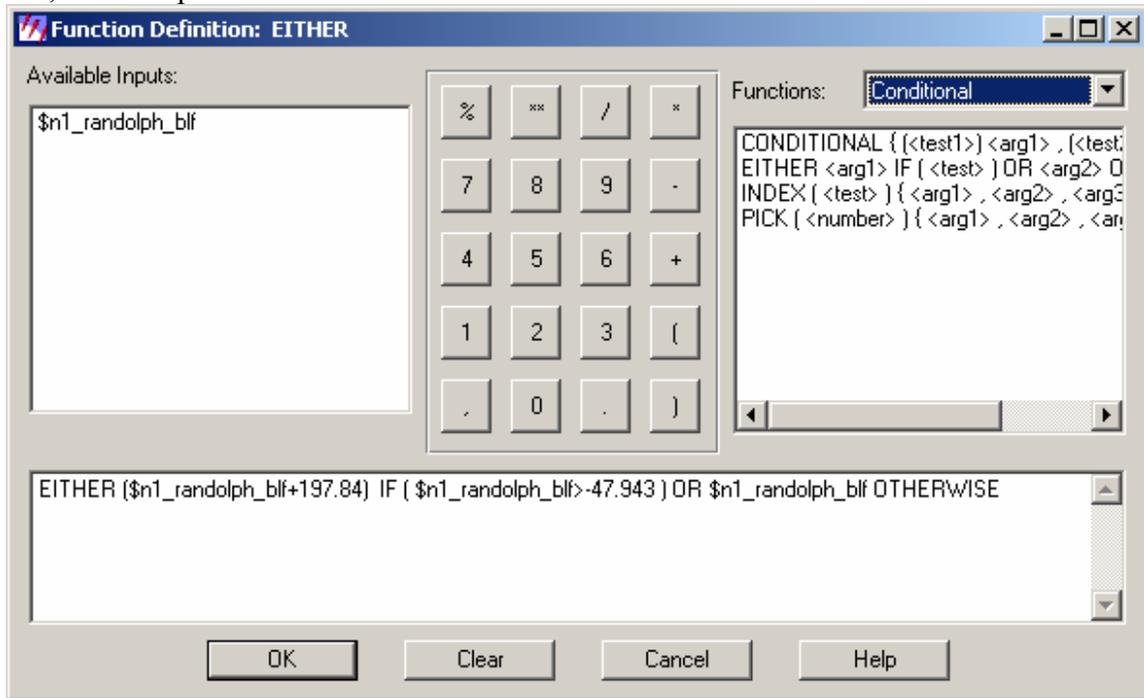

0 is = to 197.84, so what we have done is Input file +197.84, >-47.943, which is one number lower than the lowest number in the file. The min number in file is -47.942.